

Adapters



Connection (BSP)	Part number	Material
EXTERNAL INTERNAL		
R1/8 X R1/8	FA-1/8-1/8	BRASS
R1/4 X R1/4	FA-1/4-1/4	
R3/8 X R3/8	FA-3/8-3/8	
R1/2 X R1/2	FA-1/2-1/2	
R1/4 X R1/8	FA-1/4-1/8	
R3/8 X R1/8	FA-3/8-1/8 *	
R1/2 X R1/8	FA-1/2-1/8 *	
R3/8 X R1/4	FA-3/8-1/4	
R1/2 X R1/4	FA-1/2-1/4 *	
R1/2 X R3/8	FA-1/2-3/8	
R3/4 X R1/2	FA-3/4-1/2	

Sockets



Connection BSP	Part number	Material
R1/8	FS-1/8	BRASS
R1/4	FS-1/4	
R3/8	FS-3/8	
R1/2	FS-1/2	
R3/4	FS-3/4	

Hosetail to male BSP connection



Connection BSP	Hosetail OD	Part number	Material
R1/4 MALE	08MM	FHT-1/4-8M	BRASS
R1/4 MALE	10MM	FHT-1/4-10M	
R1/4 MALE	12MM *	FHT-1/4-12M	
R3/8 MALE	08MM	FHT-3/8-8M	
R3/8 MALE	10MM	FHT-3/8-10M	
R3/8 MALE	12MM *	FHT-3/8-12M	
R1/2 MALE	08MM *	FHT-1/2-8M	
R1/2 MALE	10MM *	FHT-1/2-10M	
R1/2 MALE	12MM *	FHT-1/2-12M	
R3/4 MALE	10MM *	FHT-3/4-10M	
R3/4 MALE	12MM *	FHT-3/4-12M	
R3/4 MALE	16MM *	FHT-3/4-16M	